

*Rohnson*<sup>®</sup>

Instructions Manual

## **Electric grill R-2550**



**Specifications:** 220-240V~50Hz, 1800W

### **FOR HOUSEHOLD USE ONLY**

Before using the electrical appliance, the following basic precautions should always be followed including the following:

## IMPORTANT SAFEGUARDS



- READ ALL INSTRUCTIONS BEFORE USE.



**WARNING:** To reduce the risk of fire, electric shock, or serious personal injury:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always use the product on a flat, stable, heat-resistant surface.
- The temperature of the accessible surfaces may be very high when the appliance is in use. Make sure not to touch these hot parts of the appliance.
- Use the product in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the product to allow adequate air circulation.
- Do not place the product on or near a gas or electric burner, or inside or on top of a heated oven or other heat source.
- Do not allow the product to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during its use.
- Do not touch hot surfaces of the product. Do not move the product while it is plugged in. Allow the product to thoroughly cool before handling it.

- Do not use attachments not recommended for use with this product or sold by the product manufacturer.
- Do not use the product near water or other liquids.
- Do not place or drop the product into water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet. Do not touch or reach into the water.
- Do not leave the product unattended while it is in use. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not put any stress on the Power Cord where it connects to the product as the Power Cord could fray and break.
- Do not plug or unplug the product into/from an electrical outlet with a wet hand.
- Keep the product and its Power Cord away from heated surfaces.
- Never operate this product if it has a damaged Power Cord or Plug, is not working properly, has been dropped, damaged, or exposed to water or other liquids.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard



**CAUTION:** To reduce the risk of personal injury or product/property damage:

- This product is intended for indoor, non-industrial, non-commercial, household use only as a panini maker and healthy grill. Do not use the item outdoors or for any other purpose.
- Do not allow the Power Cord to hang where it may be tripped over or pulled (e.g., over the edge of a table or counter).

## **SPECIAL INSTRUCTIONS:**


- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- A short power supply cord is provided with this product. An extension cord is not recommended for use with this product, but if one must be used:
  - The marked electrical rating of the cord must be at least as great as that of the product.
  - Arrange the extension cord so that it does not hang where it can be tripped over or pulled unintentionally.
  
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch a hot surface
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- To disconnect, remove plug from wall outlet.
- Do not use this appliance for other than intended use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- CAUTION: The temperature controller do not immerse in any liquid. Use with wall or base receptacle only
- This product cannot be operated through an external timer or a separate remote control system.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- **Save these instructions.**
- **This product is for household use only.**

## Main Functions:

1. Nonstick grill plates ensure effortless food release and quick cleanup.
2. Adjustable temperature controller.

## DESCRIPTION OF PARTS

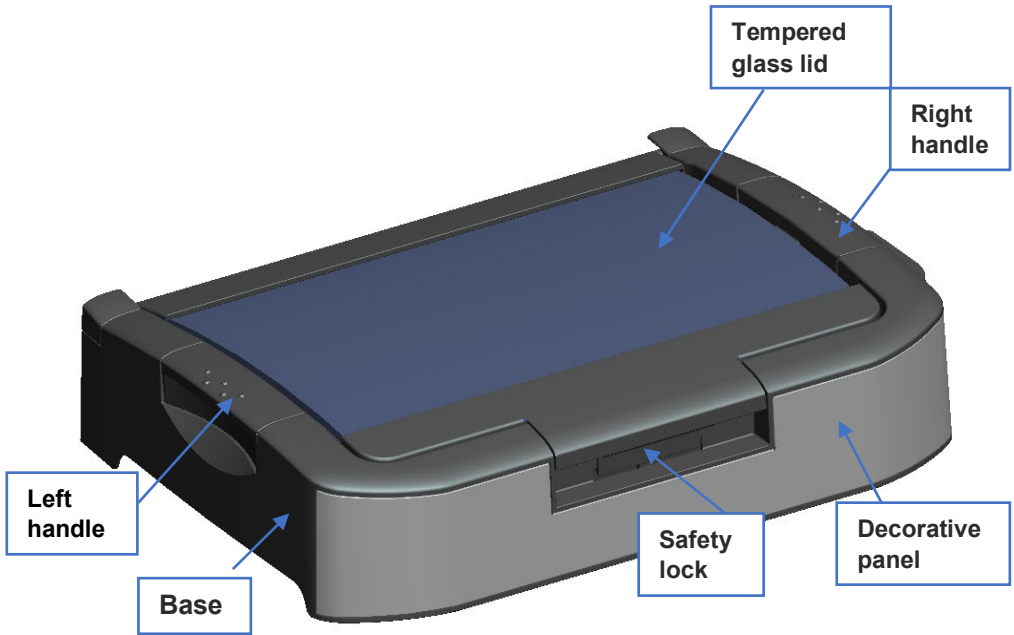

## HOW TO USE

**CAUTION:** Do not use this product to cook or defrost frozen food. All food must be completely defrosted before cooking it with this product.

**NOTE:** *During the initial uses of this product, it may produce some smoke. This is normal and will subside with further use.*

1. Before using this product for the first time, clean it as described in the “Care and Maintenance” section.
2. Press in the end of the Locking Latch nearest the Handle to unlock the product.
3. Open the unit by pulling the Handle up.

4. Close the Plates and turn the unit on by plugging it into a standard electrical outlet. Verify that the Power Indicator Light illuminates in red.  
**WARNING:** The Cooking Plates and metal surfaces of the unit will become extremely hot when in use. To avoid a burn hazard, wear heat resistant mitts or gloves and touch only the black portion of the Handle.
5. After the unit preheats for approximately five minutes, the Red Indicator Light will go out, indicating the product is ready for use.
6. Open the glass cover. Place food on the Lower Plate using wooden or plastic heat-resistant utensils.  
**CAUTION:** Do not use metal utensils on this product, as they will scratch and damage the Plates' non-stick coating.
7. Use the temperature control knob to control the temperature.  
**NOTES:**
  - *The cooking time for different foods depends on the type and thickness of the foods.*
  - *Foods should be cooked thoroughly before consumption.*
8. When the food is cooked as desired, open the glass cover, then remove the food using the utensils. If more cooking will be done at this time, close the glass cover to conserve heat.
9. Repeat Steps 7-9 until all cooking is complete, reapplying cooking oil as necessary.
10. Turn off the product by unplugging the Power Cord from the electrical outlet.
11. When the unit has completely cooled, clean and dry it.
12. Lock the unit in its closed position by pressing in the end of the Locking Latch farthest from the Handle.

## CARE AND CLEANING

### Cleaning

1. Before cleaning, unplug and wait for the appliance and the plates to cool down.
2. Wipe the outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enters the cooling slots.
3. Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
4. Do not immerse in water or any other liquid.

### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

