 


Rohnson[®]

**Air Circulator with remote control
Model: R-8520
Instruction Manual**

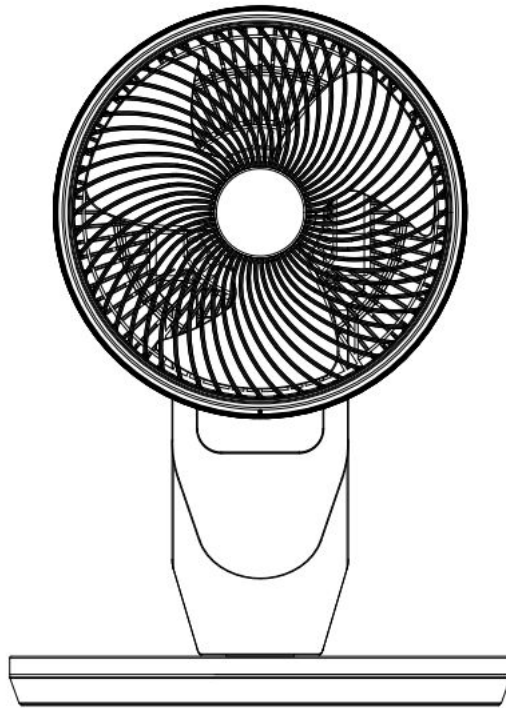


Read this instruction manual carefully before assembling or operating the appliance and keep it for future reference.

Safety precautions



1. Use as per the rating voltage.
2. Non-professional personnel or unauthorized repair personnel shall not repair or modify the machine by themselves to avoid danger.
3. Turn off the power before pulling out the plug. Do not plug or unplug the power plug with wet hands to avoid electric shock.
4. It is forbidden to use in places where flammable or explosive materials are stored, so as to avoid fire accidents, electric shocks and other safety accidents.
5. It is strictly forbidden to use in places with a lot of dust. The ambient air should be smooth when used, and the ambient temperature should not exceed 30 °C. When no one is indoors, the power should be turned off.
6. This machine is not intended for use by persons with physical, sensory or intellectual disabilities or those who lack experience and common sense, unless others can ensure their safety, supervise them and read the instructions in advance.
7. If the power cord is damaged, it must be replaced by the manufacturer or its maintenance department and similar full-time personnel to avoid danger.
8. Do not clean, maintain and move the unit with electricity.
9. After use, turn off all buttons and then unplug the power cord. Unplug the power cord for a long time.
10. It is strictly forbidden to use the machine in an environment with flammable and explosive gas, and avoid direct sunlight to the machine for a long time.
11. It is forbidden to insert foreign objects into the air outlet to avoid danger, and more attention should be paid to children.
12. It is strictly forbidden to use this product with programs or other devices with automatic power-on.
13. Do not place items on this unit, keep the air inlet and outlet nets unblocked, and prohibit foreign objects from covering the air outlets.
14. Do not place the unit in a tilted or other unbalanced position to prevent the machine from falling, resulting in damage to the body or parts inside the body.
damage.
15. This machine is suitable for indoor use, please do not use it outdoors.
16. When going out or not using it for a long time, please turn off the product switch and pull the power plug out of the socket.
17. when wiping or maintenance, first cut off the power, after the standby device stops working, then use a damp cloth or a soft brush to clean. Do not use Corrosive cleaning agent or solvent cleaning, it is strictly forbidden to wash the machine with water.
18. If the product fails, please contact the local after-sales service center. Do not disassemble the machine.
19. use this machine is strictly prohibited to fall over to prevent accidents. If the unit is accidentally dumped and there is water in the unit, immediately unplug the power cord. Head, wait for 24 hours to dry before booting.
20. please do not put the machine into the air outlet close to the wall, curtains and other physical objects, otherwise it may block the airflow, affecting the air supply effect.
21. It is forbidden to place the unit directly under the power socket.
22. Do not use this unit around bathtubs, sprinklers or swimming pools.
23. Children should be supervised to ensure that they do not play with the appliance.

Product parts

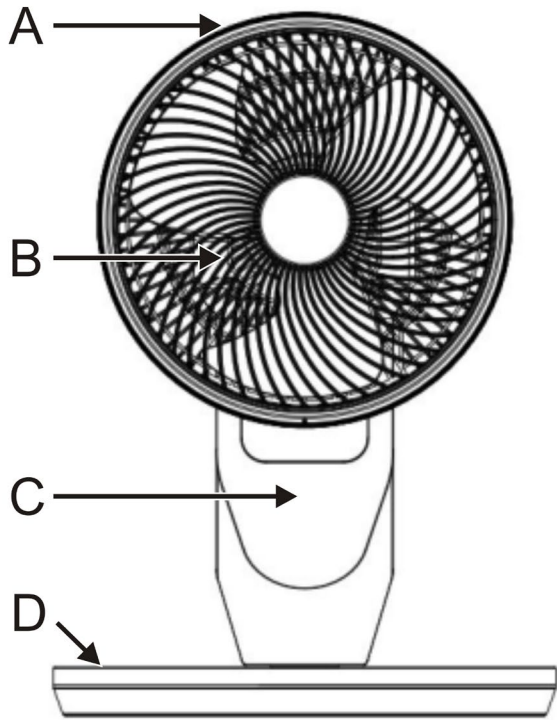


A: Air inlet
B: Air outlet
C: Control panel
D: Base


Remote control:

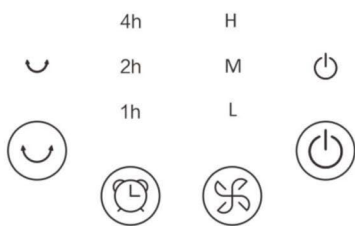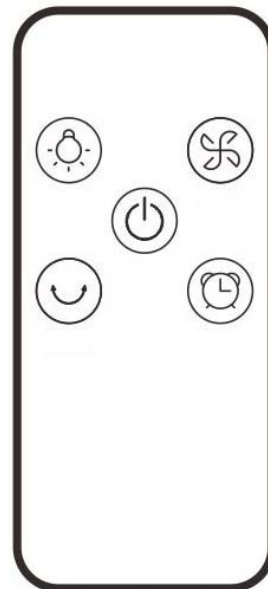



Operation


1. Stand-by : insert the power cord plug into the power socket, then the product will emit "di". the power indicator light on  , indicating that the machine has been on stand-by mode.


Note: Do not use wet hands to plug in and out of the machine, in order to avoid danger caused by electric shock, remove the power plug when moving the machine.


2. Press the "" button on stand-by mode, the product will enter the MID (middle) work by default, at the same time the MID indicator light will be on and decorative lamp also light on. Press

It  again, products turn off and into stand by mode.

3. Press the "" button, the product will enter the MID work by default, at the same time the MID indicator light will be on and power light is also on. You can choose between low-mid- high speed and the corresponding light is on.


4. Press the "" button, set the timing shutdown time, timer from 1-7h. press one is 1 hour.

5. Press the "" button, the fan swings from right and left to supply air. Press this button again, and the fan stops swinging.

6. Press the "" button on remote control, then all the lights on the fan display panel will go off. Press the button again to light up. Or no any operation in 10 minutes, the product will automatic turn off all light, press any button to turn on the indicator light.

7. Up or Down: according to the need can be manually persuaded to tilt the fuselage, adjust the blowing Angle

- 1、 Remote control have same function as control panel.
- 2、 If not used for a long time, be sure to pull out the power cord from socket.
- 3、 Install the battery (battery is included)

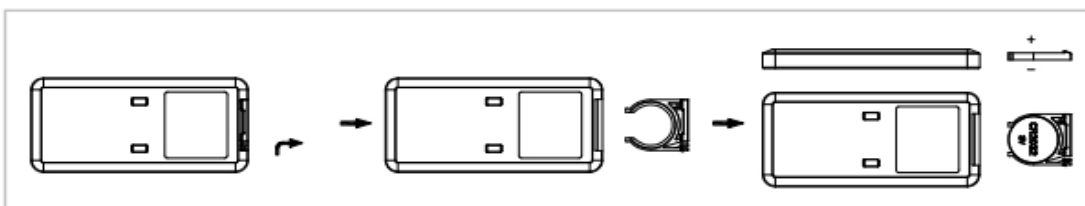

CLEANING AND MAINTENANCE

1. When not in use for a long time, please clean the product, and after drying it, put the body and parts into the package according to the original packaging order.

Pack the box and keep it in a cool dry place.

2. Before cleaning, please cut off the power supply and wait for the standby body to cool down.

3, avoid washing the product directly with water, wipe it with a soft cloth containing a little neutral detergent, and then clean it with a clean soft cloth. Please do not use solvents such as gasoline or toluene.

4. After cleaning, the standby body can be fully energized before it can be used.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.