 


Rohnson[®]

R-8802

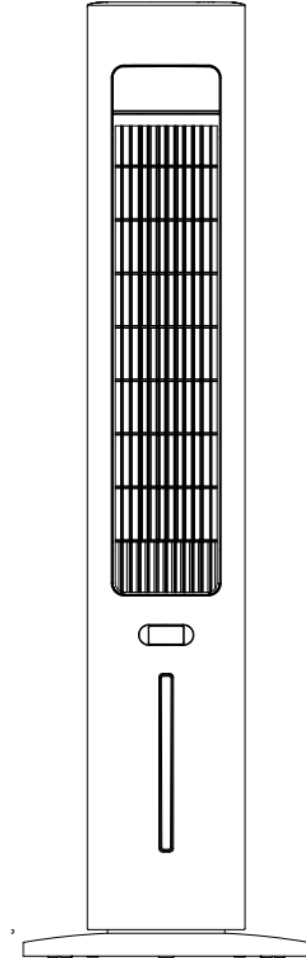

**Tower Fan with cooling
220-240V~50Hz 60W**

Thank you for buying a Rohnson Tower Fan.

USER MANUAL

Warning!

According to instruction: EN 60335-2-98:2003/A11:2019:

- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not permit the area around the Air Cooler to become damp or wet. If dampness occurs, turn the output of the Air Cooler down. If the Air Cooler output volume cannot be turned down, use the Air Cooler intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Unplug the appliance during filling and cleaning.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the Air Cooler before storage. Clean the Air Cooler before next use.

READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED. PROTECT YOURSELF AND OTHER BY OBSERVING ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE!

IMPORTANT SAFETY INFORMATION

1. Read all instructions carefully before using the FAN.
2. Use this FAN only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
3. Remove the package and ensure that the FAN is undamaged. In case of doubt do not use FAN and contact with your supplier.
4. Do not let children play parts of package.
5. Before use the FAN, check if the voltage marked on the rating label corresponds to the mains in your home.
6. Extreme caution is necessary when the FAN is used by or near children or Invalids and whenever the FAN is left operating unattended.
7. Avoid using extension cord as the extension cord may overheat and cause a risk of fire.
8. Do not pull the power cord to disconnect with power source. Always grasp the plug to pull out.
9. Do not insert any objects into the FAN as it may cause an electric shock or injure or damage to the FAN. Do not block or tamper with the FAN in any manner while it is in operation.
10. Do not leave the FAN unattended. Always unplug FAN when not in use.
11. This FAN is not intended for use in wet or damp locations. Never locate a FAN where it may fall into a bathtub or other water container.
12. Do not use FAN outdoors.
13. Disconnect the fan from the mains power when not in use, and before servicing or performing any maintenance.

WARNING:	The Main Power Switch and the on/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.
-----------------	---


14. Keep the fan clean and maintain in good condition (use an authorized service agent). Unplug the appliance during filling and cleaning.
15. Use recommended parts only (non-genuine parts may be dangerous and will invalidate your

warranty).

16. When not in use store in a safe, dry, childproof location.
17. This appliance can be used by Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
18. Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
19. Do not permit the area around the appliance to become damp or wet. If dampness occurs, turn the output of the appliance down. If the appliance output volume cannot be turned down, use the appliance intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
20. Empty and clean the appliance before storage. Clean the appliance before next use.
21. The back housing shall not dismantle, removal will be dangerous.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with appliance.

WARNING :	To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufactory or it's service agent or a similarity qualified person in order to avoid a hazard.
------------------	--

 Components Diagram

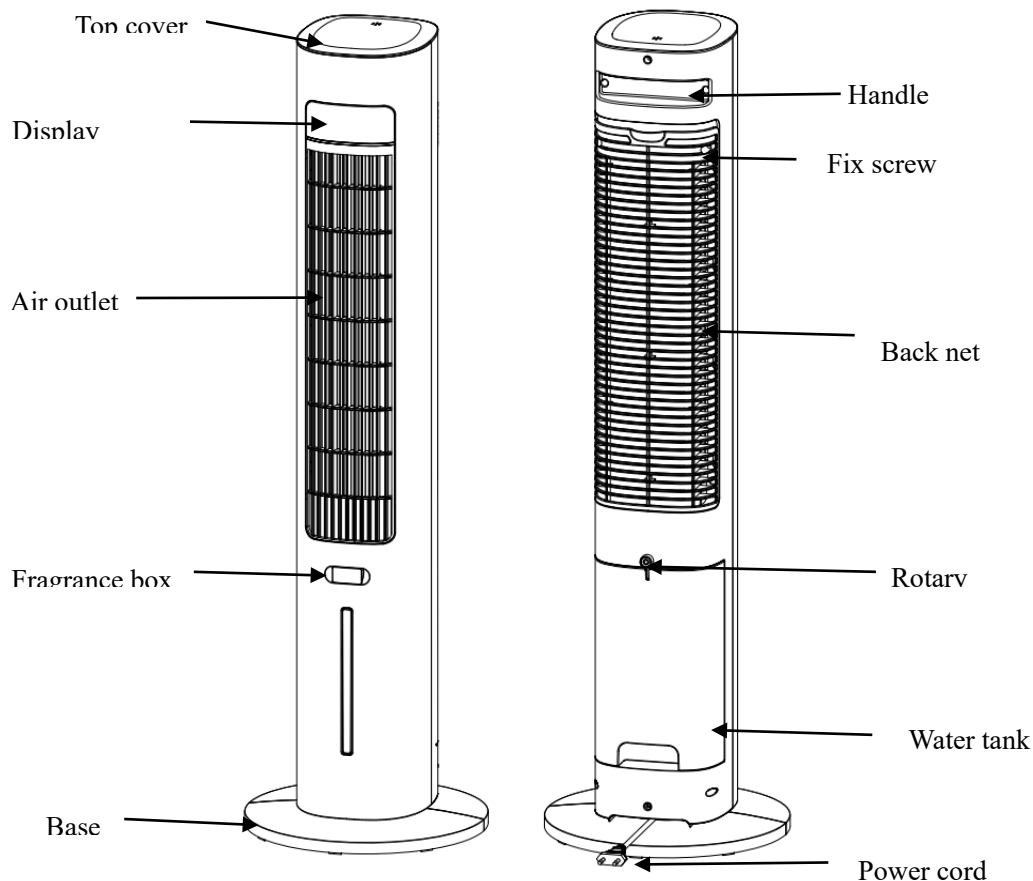

OPERATION

Take out the product from gift box.

ASSEMBLING

Base installation instructions:

Turn the product upside down, take out the base, Angle the chassis to the buckle and fasten it (see Figure 1), align the product with the buckle, rotate the product and the base in the direction shown in the base installation diagram (see Figure 2), and lock the product until you (see Figure 3). To disassemble the base, please press (Figure 4).

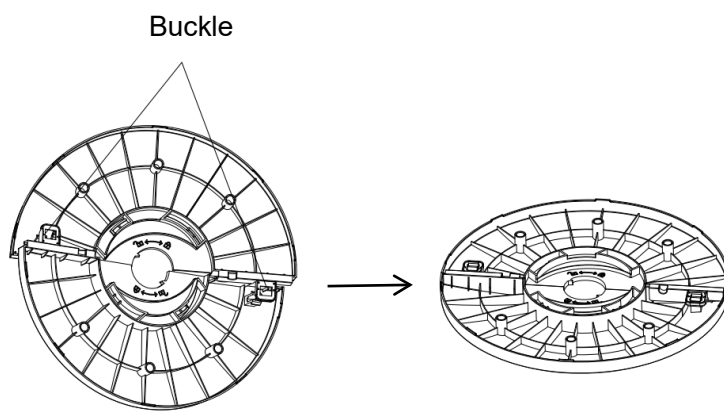 


Figure 1

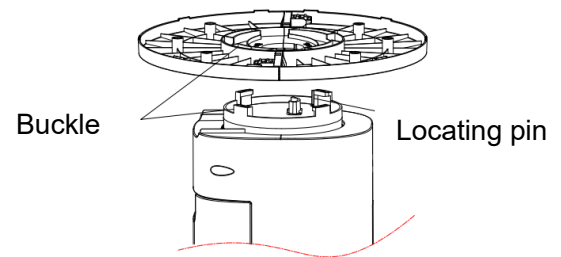 


Figure 2

To hear the buckle sound.

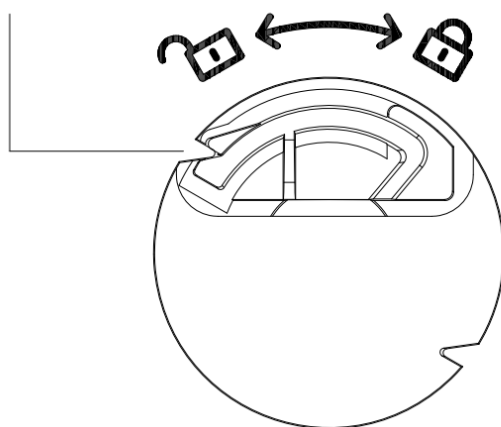 


Figure 3

In case of disassembly press the buckle to disassemble the base.

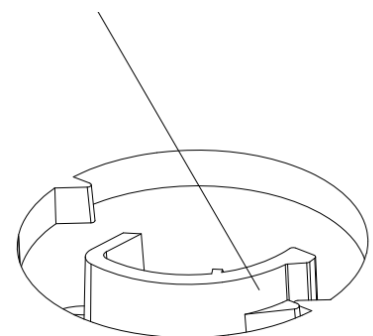 


Figure 4

Fill the water tank:


1. Fill the water tank with cold and clean water. Make sure that water level is between “Min” minimum level and “Max” maximum level.
2. To increase the cool effect, insert the ice box in the water tank. Before use ice box, they must be filled by water and put in the refrigerator until they are completely frozen.
3. Close the water tank.


Attention!

1. Make sure the product is unplugged from the mains before filling or refilling the water.
2. Only use water in the water tank. Do not add any chemicals, oils or other additives.
3. Only use cold water in the water tank (previously boiled)
4. Make sure the water level in the water tank is between minimum level .(indicated by “Min”)and maximum level(indicated by “Max”)


Place the unit on a firm level surface and plug it into a socket. Power indicator light reminding


this product in standby mode. Turn on  button , default setting is in middle speed, Turn it again, products in standby.


1. Speed key  Press this key to select middle ,high ,low fan speed.

2. Mode key  :default setting is in normal wind. Press this key to set from normal wind, natural wind, sleep wind.


- NORMAL wind  : Fan will start work at any speed you set up.

- NATURAL wind  : Fan will start work at low speed(5s) →medium speed(5s)→high speed(5s)→medium speed(5s), it works as per this recycle.

-SLEEP wind  : If you set the fan at high speed, fan will work at high speed at 30 mins, then the fan will transfer to medium speed and work at 30 mins, later the fan transfer to low speed and keep working until the fan stop working. 2) If you set the mode at medium speed, fan will work at medium speed at 30 mins, then the fan will transfer to low speed and keep working until it stop working. 3) If you set the mode at low speed, fan will work at low speed until the fan stop working. The LED display will turn off if you don't control the fan in 30 seconds, touch any button to turn on the display.

3.Swing key  : press this key, the wind direction can swing flatly, and the swing indicator light is on. Press again to cancel the function.

4. Timer key  : press this key, the timer from 0 to 12 hours, each pressing 1hour.

 
5. Cooling key  : press this key, start this function. Press it again to turn off the function.
(make sure water level is above min. line)

ATTENTION ABOUT ICE BOX

Then put an ice box in the water tank (the ice box needs to be frozen for more than 3 hours), and the cooling effect is better (Note: when the water tank is short of water, it is forbidden to use, please add water in time).

Do not open the cover of Ice Box, to avoid its leakage. The Ice Box is environmental protection material that would storage in refrigerator and would use it repeatedly.

Remote control and panel display:

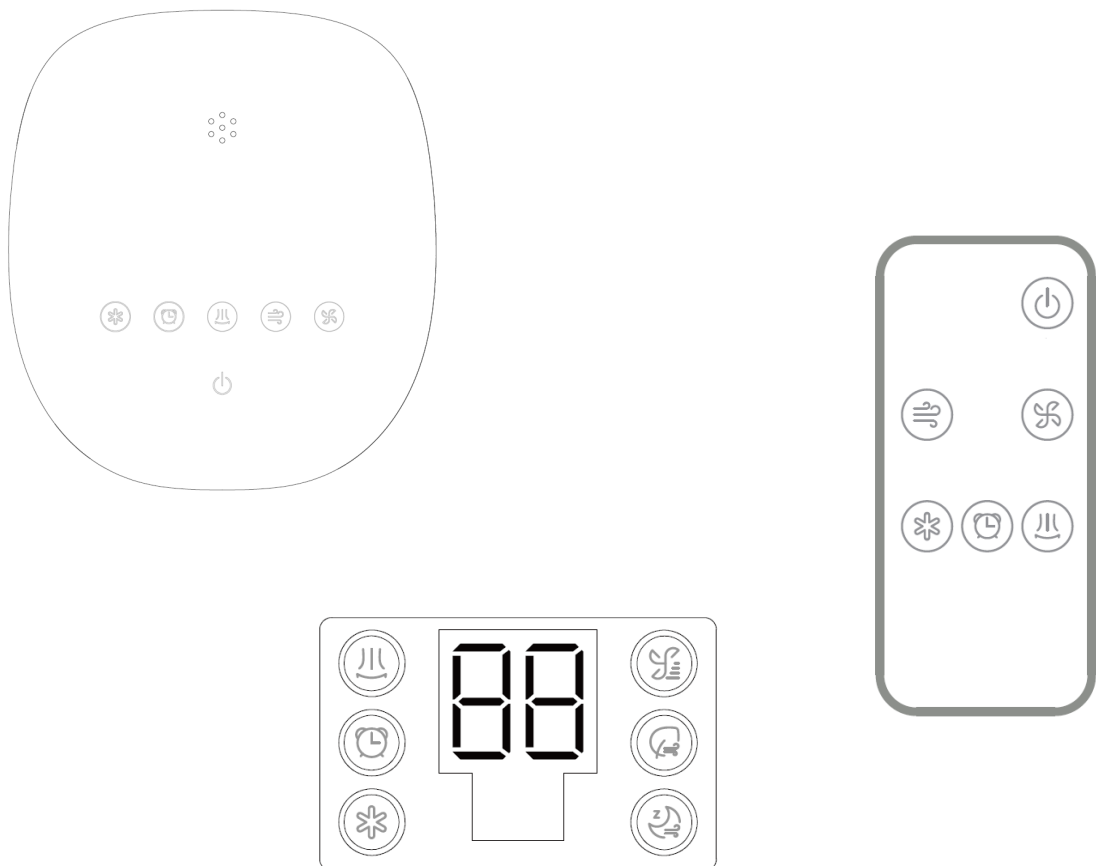

THE USAGE OF FRAGRANCE BOX

In the front of the fan, there is a small box below the vent .There is a sponge inside the fragrance box. Take out the box and put some fragrance on the sponge if you would like the wind blow with fragrance.



STORAGE & MAINTAINENCE GUIDELINES:

WARNING: Always switch off the Air Cooler and unplug it from the electrical source before cleaning or maintenance. Cleaning at least once a week, drain the water tank completely and refill with fresh water. Doing this will greatly reduce mineral deposits and help to extend the life of the water pad. End of season storage If the Air Cooler will not be used for a long time:

Make sure all parts are dry by running the Fan Only mode for about 30 minutes before storing (time depends on ambient humidity conditions). Switch OFF the Air Cooler and unplug from the power supply. Empty/drain all the water from the tank. Clean the water tank with a damp cloth to wipe away any dust or mineral deposits. Remove the water pad from the Air Cooler and rinse under fresh water to remove dust and dirty (Do not rub the mesh with your hand to avoid deformation and deformation of the net, affecting the wind), and put it back into the fuselage. See Figure A below. To protect the unit from dust and scratches, cover with a clean cloth or plastic bag before storing. Coil the power cord and store it away from the floor to protect it.

 
CLEANING & DRAINING THE WATER TANK

WARNING:

Before cleaning the unit, switch the unit OFF and disconnect from the electrical socket. Turn the small rotary on the water tank clockwise to open and slide out. Turn the 2 water pump safety locks clockwise and pull out the water tank so it comes out.

See Figure B below.

Refill the water tank with clean water and drain it completely. Use a damp cloth to remove the dirt and dust from the surface of the unit. Refill the water tank with clean water, up to the maximum level. Never use corrosive elements or chemicals to clean this product. Refit the water tank, secure the 2 water pump safety locks and the small rotary of water tank. When the product is not in use, store the unit in a dry place out of direct sunlight.

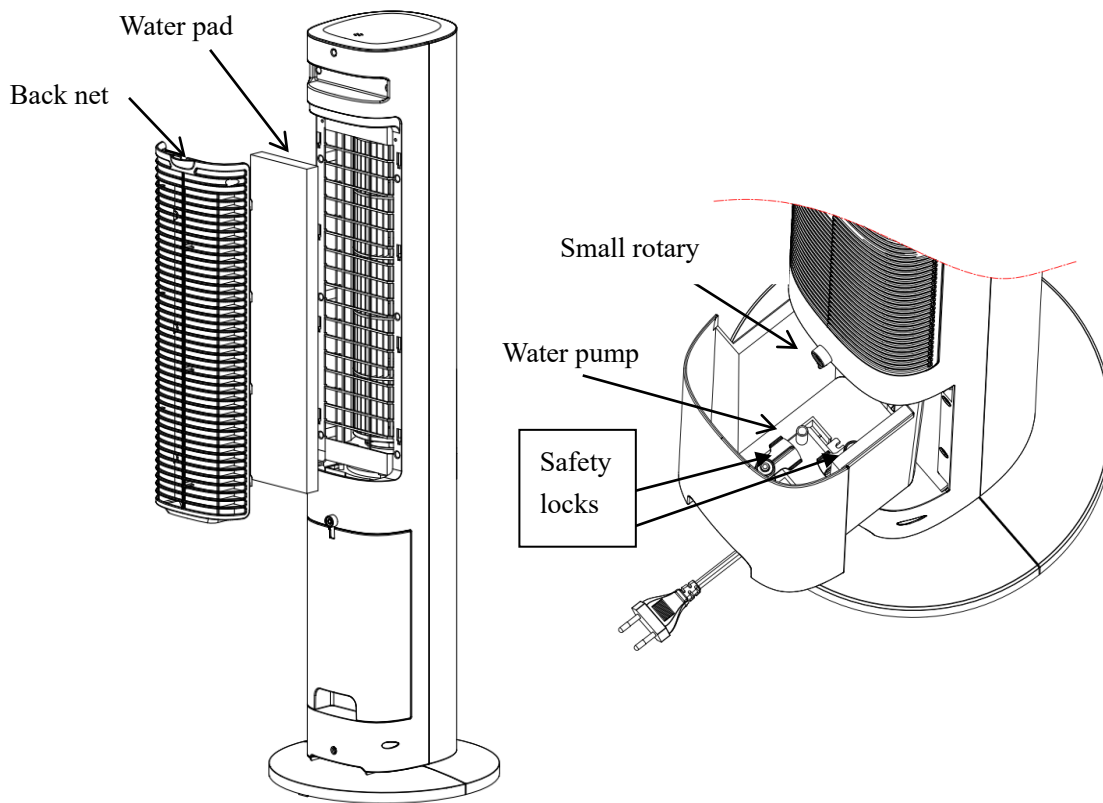

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.