

Rohnson[®]
Instructions Manual
Electric Kettle R-7032



Read all the instructions before using this kettle and keep the instructions safe. If you pass the kettle on, pass on the instructions too. Remove all packaging, but keep it till you're satisfied the kettle is working.

Important Safeguards

Follow basic safety precautions, including:


1. Before commissioning this kettle please read the instruction manual carefully.
2. Please keep the instructions, the warranty card, the sales receipt and, if possible, the gift box with the inner packaging.
3. Always remove the plug from the socket whenever the device is not in use. Pull on the plug, not on the cable.
4. Test the electrical kettle and cable regularly for damage. If there is any damage, please do not use it.
5. If the supply cord is damaged, it must be replaced by the manufacturer or service agent or a similarly qualified person in order to avoid a hazard.
6. Do not repair the device by yourself, but rather consult an authorised expert.
7. Keep the electrical kettle and the cable away from heat, direct sunlight, moisture, sharp edges and such like.
8. Only use original accessories.
9. If the kettle is overfilled, when boiling up the water, the water may jump out.
10. Do not use the electrical kettle outdoors.
11. Never place the electrical kettle in water or other liquid, or come into contact with such. Do not use the electrical kettle with wet hands.
12. Should the electrical kettle become moist or wet, remove the mains plug from the socket immediately.
13. In order to protect children from the dangers of electrical appliances, never leave the children unsupervised with the electrical kettle. Place your kettle in a position that children can not reach. Take care that the cable does not hang down.
14. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.

15. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

16. Keep the appliance and its cord out of reach of children less than 8 years.

Household Use Only

Product Image

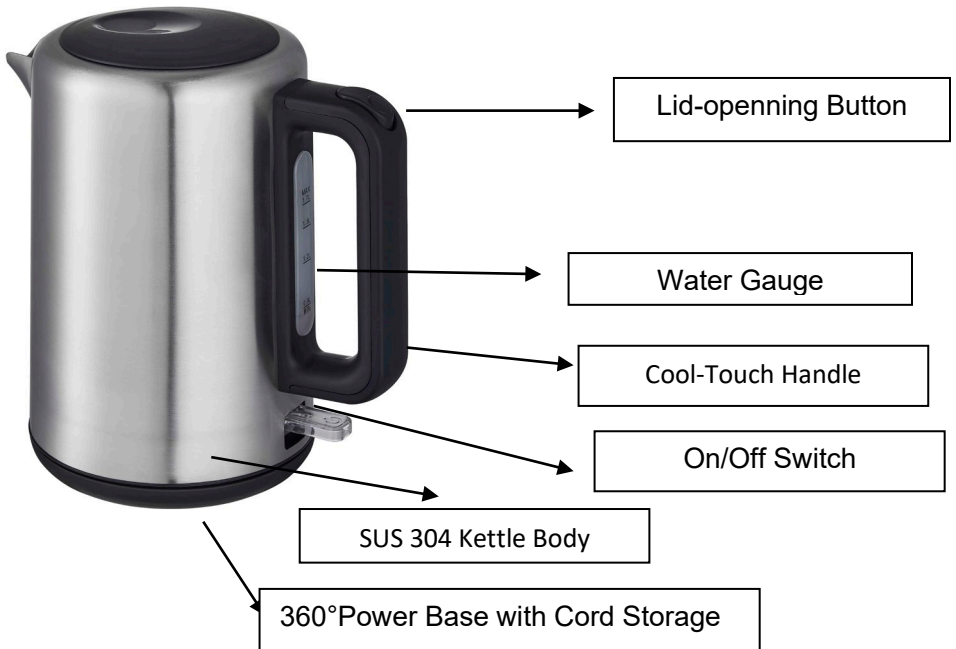

Special Safety Instructions

1. Use only cold water when filling.
2. The water level must be under the MAX marks.
3. Switch the electrical kettle off before removing it from the power cord base.
4. When the electrical kettle is working, make sure the lid is tightly closed.
5. The base and exterior of the machine must not become wet.

Before first use

1. Fill the electrical kettle with water. Do not overfill, keep the water level under the MAX marks.
2. Place the kettle on the base.
3. Check whether the electrical voltage that you intend to use is the same as the electrical kettle. Details are to be found on the rating label on the base of the kettle.
4. Switch on the kettle.
5. After boiling, the electrical kettle will switch off automatically. Take the electrical kettle away from the power cord base.
6. Do not open the lid when pouring out the water.

Care and maintenance

Before cleaning, please unplug the electrical kettle and make sure it has cooled down.

Never immerse any part of the cable, plug, power cord base or kettle in water or any other liquid.

Exterior of the kettle:

Wipe the exterior of the kettle with a piece of damp cloth and then dry it with a piece of dry cloth.

Never use harsh chemicals or abrasive cleaning agents as these may damage the finish of your kettle.

Interior of the kettle

Over using a period of time, lime scale would builds up inside your kettle

To remove lime scale:

1. Half fill the kettle with water and put some citric acid in the water.
2. Boil up the water and allow it to stand for 15 minutes before discarding.
3. Repeat steps 1 and 2 several time. Please use cold water only.

Then the lime scale inside the kettle will be removed

Technical Specifications

AC 220-240V 50-60Hz 1850-2200W

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT BY EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection center or a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

