

***Rohnson***<sup>®</sup>

Instruction Manual

**Kettle R-7620**



### IMPORTANT SAFETY INSTRUCTIONS

1. This appliance can be used by children aged 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
2. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
3. Keep the appliance and its cord out of reach of children aged less than 8 years.
4. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
5. Children shall not play with the appliance.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid any hazard.
7. Regarding the instructions for cleaning the surfaces which come in contact with food, please refer to the paragraph “cleaning and maintenance” of the manual.
8. This appliance is intended to be used in households and similar applications such as staff kitchen areas in shops, offices, and other working environments; farm houses; by clients in hotels, motels, and other residential type environments; bed and breakfast type environments.
9. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the same, contact your dealer and do not use the kettle.
10. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well-earthed.
11. Do not operate the appliance without load to avoid damaging the heat elements.
12. Unplug from the outlet when not in use.
13. Do not let the cord hang over the edge of the table counter or touch a hot surface.
14. Do not place on or near a hot gas or electric burner or in a heated oven.
15. Should you accidentally allow the kettle to operate without water; the boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling it with cold water and re-boiling.
16. Ensure that kettle is used on a firm and flat surface where the children can't reach it, this can prevent overturning the kettle to damage the person or kettle.

17. To protect against fire, electric shock, or personal injury, do not immerse the cord, electric plugs, or kettle in water, or other liquids.
18. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
19. Be careful when opening the lid for refilling when the kettle is hot.
20. Close supervision is necessary when any appliance is used by, or near children.
21. Do not touch the hot surface. Use the handle or the button.
22. Extreme caution must be used when moving an appliance containing hot water.
23. The appliance is not a toy. Do not let the children play with it.
24. The use of accessory attachments that are not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
25. While water is boiling, avoid contact with steam from the spout when water is boiling or just after it has switched off. Do not be anxious to uncover the lid.
26. Unplug from the outlet when not in use and before cleaning; allow it to cool before putting on or taking off parts and before cleaning the appliance.
27. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
28. Do not use the appliance for other than intended use.
29. If the kettle is overfilled, boiling water may be ejected.
30. The kettle is for household use only, not outdoors.
31. The machine should not be operated using an external timer switch or using a separate system with remote control.
32. Do not remove the lid while the water is boiling. This appliance is not designed for commercial use. Our warranty does not cover water kettles that malfunction resulting from failure to descale.
35. Don't boil any tea directly in this water kettle

## **HOUSEHOLD USE ONLY**

### **BEFORE USING YOUR KETTLE**

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

## **OPERATION OF YOUR KETTLE**

1. Open the lid and fill it with the desired amount of water in the water kettle. Always fill the kettle between the minimum and maximum marks inside the kettle. Too little water will result in the kettle switching off before the water has boiled.

**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

2. Connect the plug to a power outlet. Press the switch downwards on the handle. The indicator will light up. Then start to boil the water. The kettle will switch off automatically once the water has boiled. You can shut off the power by pressing the switch button upwards at any moment during boiling water.

**NOTE:** Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained.

3. Take the plug out of the outlet. Lift the kettle then pour the water.

**NOTE:** operate carefully when pouring the water from your kettle as boiling water will scald.

4. The kettle will not re-boil until the switch is pressed downwards. Allow cooling for 30~40 seconds before reopening to boil water.

**NOTE:** Ensure the power supply is turned off when the kettle is not in use.

5. Should you accidentally allow the kettle to operate without water; the boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling it with cold water and re-boiling.

## **CLEANING AND MAINTENANCE**

1. Always let the kettle cool down first and disconnect the appliance from the power outlet before cleaning.
2. Never immerse the kettle area or cord in water or allow moisture to contact these parts.

## **CLEANING APPEARANCE OF HOUSING**

Wipe the appearance of the body with a wild and damp cloth or cleaner, never use a poisonous cleaner.

Descale regularly, preferably at least once a month, and more frequently if your water is very hard.

To descale your kettle, use:

- white vinegar
  - fill the kettle with half a liter of vinegar
  - leave to stand for 1 hour without heating
  - citric acid:
  - boil half a liter of water
  - add 25g of citric acid and leave to stand for 15 minutes.
  - a specific descaling agent for plastic or stainless-steel kettles:
  - follow the manufacturer's instructions.
- Empty your kettle and rinse it 5 or 6 times

### **TECHNICAL SPECIFICATIONS**

|                     |             |
|---------------------|-------------|
| Rated voltage range | 220-240 V   |
| Rated frequency     | 50-60 Hz    |
| Rated power         | 1850-2200 W |
| Capacity            | 1,7L        |

### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enabling the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

