

# *Rohnson*<sup>®</sup>

## **INSTRUCTION MANUAL**

PROFESSIONAL HAIR CLIPPER

MODEL: R-1018



## IMPORTANT SAFEGUARDS

**WARNING:** Keep the appliance dry.

- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

**WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

- The appliance is only to be used with the power supply unit provided with the appliance.
- This appliance contains batteries that are non-replaceable.
- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- The battery is to be disposed of safely.
- Only remove the rechargeable battery when you are intending to discard the appliance and you have the rechargeable battery removed by a professional.
- Do not place or store Trimmer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.



Always use the specified adaptor by the factory.

When using an electrical appliance, basic precautions should always be observed, including the following.

**READ ALL THE INSTRUCTIONS BEFORE USING THIS APPLIANCE.**

## DANGER

**To reduce the risk of electric shock:**

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using it.

## **GROOMING SYSTEM**

**To reduce the risk of burns, fire, electric shock, or injury to persons:**

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F(60°C).
- Make sure the cord is disconnected from the groomer stand when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

## **PRODUCT OVERVIEW**

### **Professional Hair Clipper**

Use the extra-wide hair trimmer without a guard to clip the hair on your head very close to the skin or to contour the neckline and area around the ears.

- 1) To contour the hairline around the ears, comb the hair ends over the ears.
- 2) Tilt the product in such a way that only one edge of the cutter blades touches the hair ends when you shape the contours around the ears.
- 3) To contour the nape of the neck or sideburns, turn the product and make downward strokes.
- 4) Move the product slowly and smoothly following the natural hairline.
- 5) In the boot state, press "T" (TURBO) to accelerate the power, customers can use according to the situation.



### **Hair guards**

Install a conditioner on a professional clipper to trim your hair evenly. The product comes with 4 hair guards (3mm,6mm,9mm,12mm). The hair length settings are indicated on the guards. The settings correspond to the remaining hair length after trimming.

### **Hair length adjustment function**

1.4 kinds of hair length (1.0mm, 1.3mm, 1.6mm, 1.9mm) can be adjusted by adjusting rod. When moving to the left direction (keep the length of hair cut short).

### **Cleaning Professional Hair Clipper**

- 1) Press the release switch with your thumb to remove the blade.
- 2) Use a small brush along the blade discharge rule around or up and down brush, if more hair can also brush a few times.
- 3) Rinse directly under the tap or use a disposable cup to soak the knife holder in the cup.
- 4) After cleaning, should put the blade and knife holder in a ventilated place, air dry, remember not to be too wet environment.

**Note:** After cleaning the hair, push the lever to the far left before installing the tool head.

### **Charging Battery status indications**

- 1) When the charge indicator light shining and shows “10 minutes” on the screen, it means it’s time to charge.
- 2) Charge the device with the professional charger in the accessory, and then connect the charger to the indoor power socket. The other end of the interface is attached to the interface of the device to charge the device.
- 3) The display screen will light up when the power is switched on, the number will increase rolling with the extension of charging time.
- 4) It will take 3 hours for fully charged. It will show “99” or “Fully charged” when it finished. The working time is 240 minutes. However, the using time maybe a bit difference due to people’s personal habits.

## Environmental protection

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

## Specifications:

Lithium battery: 2000mAh

Motor voltage: DC 3.7V

Charging time: 2 hours

Working time: 2 hours

Input: 5V 1A



## IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EU.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.