

Rohinson[®]

Instructions Manual

Electric Grill R-2533 Kansas Grill

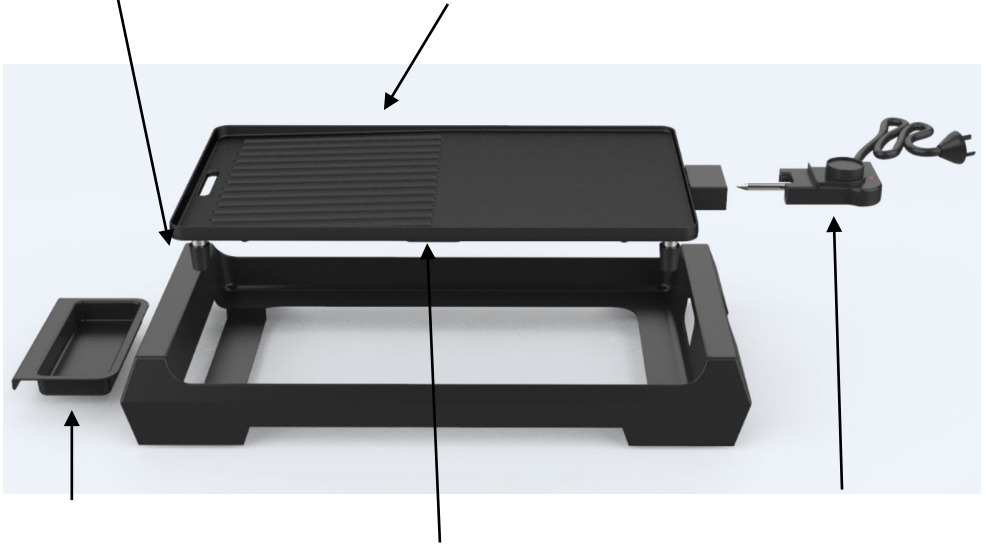


**For your safety and continued enjoyment of this product
always read the instruction book carefully before using**

IMPORTANT SAFEGUARDS

- Use well away from walls and curtains.
- Do not immerse the control probe in water or any other liquid.
- The appliance must only be used with the control probe provided.
- Adequate ventilation or an exhaust fan is recommended
- Do not leave plastic utensils in contact with appliances while cooking.
- Only use appliance fully assembled with all parts correctly in place, as specified in this instruction book.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Listed below are precautions which are essential for the safe use of an electrical appliance:
- Read carefully and save all the instructions provided with the appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place it on top of any other appliance.

- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

DESCRIPTION OF PARTS**1. Cool-touch housing****2. Slopping grooves****4. Removable drip tray****5. Grill + Flat hotplate****3. Temp. controller probe****1. Cool touch housing**

For easy carrying. Supports the hot plate and drip tray

2. Slopping grooves

To drain the grease efficiently for low-fat healthy grilling

3. Control probe

The control probe is thermostatically controlled to ensure constant temperature and is removable for portability and easy cleaning.

4. Removable drip

Collects fats and juices during cooking. Dishwasher-safe for easy cleaning

5. Grill + Flat hotplate

Grill plate: Seals in the juices and flavors of your favorite foods, and allows fats to drip through the grill bars for healthy, fat free cooking

Flat plate: Ideal for cooking a variety of foods including eggs, bacon, onions, mushrooms and tomatoes. Easy cleaning: Detachable and fine to be completely immersed in water for cleaning.

HOW TO USE

Before first use

Remove sticker from hotplate.

Wash the hotplate and drip tray in warm soapy water using a mild household detergent.

Dry hotplate and drip tray thoroughly.

Place the tray drip into base. For easy cleaning line the drip tray with aluminum foil.

This will collect the fats and juices.

For better non-stick performance, season the cooking surface of the hotplate by applying a thin coat of cooking oil and rubbing it in with paper towel before each use.

IMPORTANT: Charcoal or similar combustible fuels must not be used with this appliance.

Using your Grill

1. Insert the control probe fully into the socket of the hotplate.
2. Plug the cord into a power outlet and turn the power ON.
3. Set the control probe dial to the desired heat setting. When the thermostat light is off the control probe switches off, the desired cooking temperature has been reached and the appliance is ready to use.

Note 1: The thermostat light on the control probe indicates the appliance is heating. This light will remain ON until the set temperature has been reached and then will cycle ON and OFF throughout cooking. This will ensure that the appliance always maintains the selected temperature.

The preheat time will depend on the heat setting selected. If a high heat setting is selected, a longer preheat time is required.

NOTE 2: When barbecuing on high heat settings, the appliance will generate smoke.

Selecting a lower setting will reduce smoke.

Adequate ventilation is recommended.

CARE AND CLEANING

- Do not leave plastic utensils in contact with hotplate while cooking.
- Do not use sharp objects or cut food on top of the appliance.
- When cleaning the non-stick coating do not use metal or other abrasive scourers. After cleaning, dry the appliance thoroughly with a soft cloth before storing. Always turn the power off and remove the plug from the power point before cleaning.
- Remove the control probe from the socket of the appliance.
- **Control probe:** If cleaning is necessary, wipe it over with a damp cloth.

Do not immerse the control probe in water or any other liquid. Store the probe carefully in a safe place. Do not knock or drop it as this can damage the probe.

- **Hotplate and drip tray:** The element in the hotplate is totally sealed, so it is safe to fully immerse yourself in water. Wash the hotplate and drip tray in warm soapy water using a mild household detergent and a soft washing sponge. A bottle brush may be used to clean between the hotplate grill bars.

STORAGE

Always dry the appliance before storing.

Ensure the drip tray is correctly positioned.

Store the appliance on a flat surface on your bench top or cupboard.

Important: Before inserting control probe in probe socket, ensure the interior of the socket is fully dry. To do this, wipe the interior of the socket with a dry cloth or shake out excess water vigorously.

TECHNICAL SPECIFICATIONS

Voltage	220-230 V
Frequency	~50/60 Hz
Power	2000W

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

